

## Contents

Safety and General Information .....	2	Special Features .....	18
FCC Licensing Information .....	10	Interference Eliminator Code.....	18
Control Buttons.....	11	Push to Talk Timeout Timer.....	18
Getting Started .....	13	Locking the Keypad.....	18
Installing the the AA Batteries.....	13	Scanning Channels.....	19
Installing the NiCd Battery Pack.....	13	Advanced Scan.....	19
Battery Meter.....	14	Alerts .....	20
Attaching the Belt Clip.....	15	Channel Busy Indicator.....	20
Removing the Belt Clip.....	15	Setting and Transmitting Call Tones.....	20
Turning Your Radio On and Off.....	16	Transmitting a Talk Confirmation Tone.....	21
Setting the Volume.....	16	QT Noise Filtering.....	21
Setting a Channel.....	16	Accessories.....	23
Channels and Frequencies.....	16	Using Audio Accessories.....	23
Talking and Listening.....	17	Voice Activation (VOX).....	23
Talk Range.....	17	Setting the Sensitivity Level.....	24
Checking the Channel Before Transmitting.....	17	Patent Information .....	25
		Copyright Information .....	26
		Warranty.....	27

## Safety and General Information

### Important Information on Safe and Efficient Operation Read This Information Before Using Your Radio

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

#### Transmit and Receive Procedure

Your two-way radio contains a transmitter and a receiver. To control your exposure and ensure compliance with the general population/uncontrolled environment exposure limits, always adhere to the following procedure:

- Transmit no more than 50% of the time.
- To transmit (talk), press the Push to Talk (PTT) button.
- To receive calls, release the PTT button.

Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy exposure only when transmitting (in terms of measuring standards compliance).

#### Exposure To Radio Frequency Energy

Your Motorola radio is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J



- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radio Frequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 2001 (applicable to wireless phones only)
- ANATEL, Brasil Regulatory Authority, Resolution 256 (April 11, 2002) "additional requirements for SMR, cellular, and PCS product certification."

To assure optimal radio performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures.

#### Portable Radio Operation and EME Exposure

##### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.

DO NOT hold the antenna when the radio is "IN USE." Holding the antenna affects the effective range.

Safety and General Information



4 Safety and General Information



#### Two-way Radio Operation

When using your radio as a traditional two-way radio, hold the radio in a vertical position with the microphone 1 to 2 inches (2.5 to 5 cm) away from the lips.

#### Body-Worn Operation

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a radio on your body when transmitting, always place the radio in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines. If you do not use one of the Motorola-supplied or approved body-worn accessories, and are not using the radio held in the normal use position, ensure the radio and its antenna are at least 1 inch (2.5 cm) from your body when transmitting.

#### Data Operation

If applicable, when using any data feature of the radio with or without an accessory cable, position the radio and its antenna at least 1 inch (2.5 cm) from the body.

#### Approved Accessories

For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

#### Electromagnetic Interference/Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.





### Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

### Aircraft

When instructed to do so, turn off your radio when on board an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew instructions.

### Medical Devices - Pacemakers

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless radio and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of the U.S. Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the radio more than 6 inches (15 cm) from their pacemaker when the radio is turned ON.
- Not carry the radio in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio OFF immediately if you have any reason to suspect that interference is taking place.



### Medical Devices - Hearing Aids

Some digital wireless radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

### Safety and General Use While Driving

Check the laws and regulations on the use of radios in the area where you drive. Always obey them. When using your radio while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

### Operational Warnings

#### For Vehicles with an Air Bag

Do not place a portable radio in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to occupants of the vehicle.





### Potentially Explosive Atmospheres

Turn off your radio prior to entering any area with a potentially explosive atmosphere, unless it is a radio type especially qualified for use in such areas as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

### Blasting Caps and Areas

To avoid possible interference with blasting operations, turn off your radio when you are near electrical blasting caps, in a blasting area, or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

### Operational Cautions

#### Antennas

Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

7 Safety and General Information



### Batteries

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

### Battery Charger Safety Instructions

Save these Instructions

1. Do not expose the charger to rain or snow.
2. Do not operate or disassemble the charger if it has received a sharp blow, or has been dropped or damaged in any way.
3. Never alter the AC cord or plug provided with the unit. If the plug will not fit the outlet, have the proper outlet installed by a qualified electrician. An improper condition can result in a risk of electric shock.
4. To reduce the risk of damage to the cord or plug, pull the plug rather than the cord when disconnecting the charger from the AC receptacle.
5. To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning.
6. Use of an attachment not recommended or sold by Motorola may result in a risk of fire, electric shock, or personal injury.

∞ Safety and General Information





7. Make sure the cord is located so it will not be stepped on, tripped over, or subjected to damage or stress.
8. An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and/or electric shock. If an extension cord must be used, make sure that:
  - The pins on the plug of the extension cord are the same number, size and shape as those on the plug of the charger.
  - The extension cord is properly wired and in good electrical condition.
  - The cord size is 18 AWG for lengths up to 100 feet, and 16 AWG for lengths up to 150 feet.
9. The supply cord of this charger cannot be replaced. If the cord is damaged, call Motorola Product Services at 1-800-353-2729 in USA or 1-888-390-6456 TTY (Text Telephone).

Safety and General Information



### FCC Licensing Information

Your Motorola radio operates on General Mobile Radio Service (GMRS) frequencies and is subject to the Rules and Regulations of the Federal Communications Commission (FCC). The FCC requires that all operators using GMRS frequencies obtain a radio license before operating their equipment. To obtain the FCC forms, please request Form 605 and 159, which includes all forms and instructions. If you wish to have the document faxed or mailed, or have questions, please use the following contact information.

Faxed Contact the Fax-On-Demand system at:	Mailed Call the FCC forms hotline at:	Questions Regarding FCC license Contact the FCC at:
1-202-418-0177	1-800-418-FORM 1-800-418-3676	1-888-CALL-FCC 1-888-225-5322 Or: <a href="http://www.fcc.gov">http://www.fcc.gov</a>

Changes or modifications not expressly approved by Motorola may void the user's authority granted by the FCC to operate this radio and should not be made. To comply with FCC requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services. Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the FCC equipment authorization for this radio could violate FCC rules.

 
**Note:** Use of this radio outside the country where it was intended to be distributed is subject to government regulations and may be prohibited.

FCC Licensing Information






## Control Buttons - Model T5000

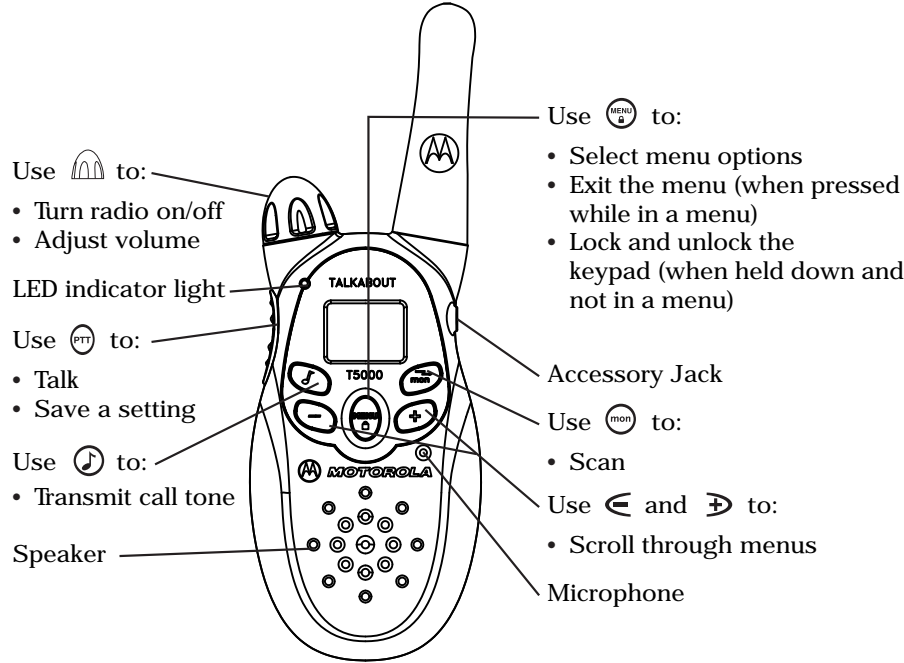

## Control Buttons - Models T5500 and T5550

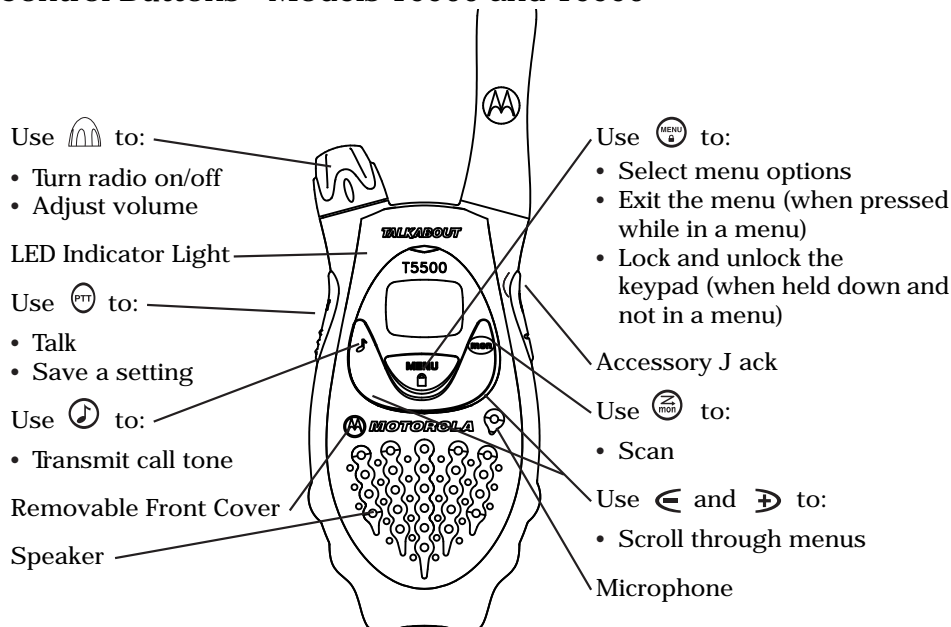 




## Getting Started

### Installing the AA Batteries

Your radio uses 3 AA Alkaline batteries.

1. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
2. Insert 3 AA Alkaline batteries as shown on the inside of the battery compartment.
3. Reposition the battery cover and press down to secure.

 Note: The T5000, T5500 and T5550 model radios can use a NiCd rechargeable battery instead of 3 AA Alkaline batteries. A rechargeable battery upgrade kit, is available for these radios.

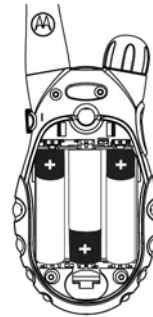

### Installing the NiCd Battery Pack

1. Follow step 1 above to remove the battery cover.
2. Remove the battery pack from the clear plastic bag. Do not disassemble or unwrap the battery pack.
3. Insert the NiCd battery pack so the metal contacts on the side of the battery are facing outward from the radio to connect with the contacts on the battery door.
4. Reposition the battery cover and press down to secure.



Getting Started

13



### Battery Meter

The battery icon shows the battery charge level, from full to empty . When the battery is empty, the radio chirps periodically after releasing . The radio powers off when the voltage drops below a predetermined level to protect the rechargeable battery.

Note: Remove the batteries before storing your radio for extended periods of time. Batteries corrode over time and may cause permanent damage to your radio.

### Using the Desk Stand Charger (Optional Accessory)

The desk stand charger provides drop-in charging convenience for NiCd batteries and can be placed on any flat surface, such as a desk or workbench. Charge the NiCd battery overnight (at least 16 hours) before using it for the first time. After the initial charge, an empty battery is fully charged within 14 hours.

1. Turn the radio off and remove the battery cover.
2. Remove the battery pack from the clear plastic bag. Do not disassemble or unwrap the battery pack.
3. Insert the NiCd battery pack so the metal contacts on the side of the battery are facing outward from the radio to connect with the contacts on the battery door.
4. Reposition the battery cover and press down to secure.
5. Plug the AC power supply into the plug on the desk stand.
6. Plug the AC power supply into a standard wall outlet.
7. Slide the radio into one of the charging pockets facing forward.

Getting Started





Notes

 
- When moving between hot and cold temperatures, do not charge the battery until the battery temperature acclimates (usually about 20 minutes).
- For optimal battery life, remove the radio or battery from the charger within 16 hours. Do not store the radio in the charger.

Attaching the Belt Clip

1. Align the belt clip post with the hole in the back of the radio.
2. Gently push until the clip clicks into place.

Removing the Belt Clip

1. Push down on the release tab at the top of the belt clip to release the catch.
2. Pull the belt clip away from the back of the radio.

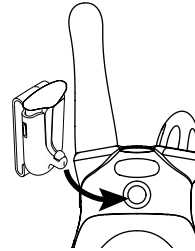

Turning Your Radio On and Off

Turn clockwise to turn the radio on and counterclockwise to turn the radio off. The radio chirps and the display briefly shows all feature icons available on your radio. The display then scrolls through the available channels and Interference Eliminator Codes.

Setting the Volume

Rotate while holding down or until you reach a comfortable listening level. Rotate clockwise to increase the volume or counterclockwise to decrease the volume.



Setting a Channel

Your radio has 22 channels. Channels 1-7 and 15-22 are 1 watt. Channels 8-14 are 0.5 watt. When the radio is on a 1 watt channel, displays. When the radio is on a 0.5 watt channel, displays.

1. With the radio on, press . The current channel flashes.
2. Press or to set the channel.
3. Press to save the channel setting.

Channels and Frequencies

Channel	Frequency	Description	Channel	Frequency	Description
1	462.5625 MHz	GMRS/FRS	12	467.6625 MHz	FRS
2	462.5875 MHz	GMRS/FRS	13	467.6875 MHz	FRS
3	462.6125 MHz	GMRS/FRS	14	467.7125 MHz	FRS
4	462.6375 MHz	GMRS/FRS	15	462.5500 MHz	GMRS
5	462.6625 MHz	GMRS/FRS	16	462.5750 MHz	GMRS
6	462.6875 MHz	GMRS/FRS	17	462.6000 MHz	GMRS
7	462.7125 MHz	GMRS/FRS	18	462.6250 MHz	GMRS
8	467.5625 MHz	FRS	19	462.6500 MHz	GMRS
9	467.5875 MHz	FRS	20	462.6750 MHz	GMRS
10	467.6125 MHz	FRS	21	462.7000 MHz	GMRS
11	467.6375 MHz	FRS	22	462.7250 MHz	GMRS





## Talking and Listening

To communicate, all radios in your group must be set to the same channel and Interference Eliminator Code.

To talk, press and hold . Hold the radio 2 to 3 inches away from your mouth when talking.

When you finish talking, release (press to talk, release to listen).

### Talk Range

Your radio is designed to maximize performance and improve transmission range. Do not use the radios closer than 5 feet apart.

### Checking the Channel Before Transmitting

Your radio has multiple channels shared on a "take turns" basis. For uninterrupted communication, do not talk on a channel if someone else is currently talking on it. To check for activity on a channel before you talk, press and hold or . If you hear static, the channel is clear to use.



## Special Features

### Interference Eliminator Code

Interference Eliminator Codes help minimize interference by providing you with a choice of code combinations.

To set the code for a channel:

1. Press until the code starts to flash.
2. Press or to select the code.
3. Press to save the code setting.

You can set a different code for each channel using this procedure.

**Note:** You must set the Interference Eliminator Code to on an FRS radio that uses Interference Eliminator Codes to communicate with other FRS radios that do not have Interference Eliminator Codes.

### Push to Talk Timeout Timer

To prevent accidental transmissions and save battery life, the radio emits a continuous warning tone and stops transmitting if you press for 60 continuous seconds.

### Locking the Keypad

To avoid accidentally changing your radio settings, press and hold for 3 seconds or until displays. You can turn the radio on and off, adjust the volume, receive, transmit, send a call tone, and monitor channels. All other functions are locked.

To unlock the radio, press and hold for 3 seconds or until is no longer displayed.





## Scanning Channels

Use scanning to monitor channels and codes for transmissions or to find someone in your group who has accidentally changed channels.

To start scanning, briefly press and release or . The scan indicator displays.

When the radio detects channel activity, it stops scanning and you can hear the transmission. To respond to the transmitting, press within 5 seconds.

Note: If your radio's Interference Eliminator Code is set to while scanning, the radio checks for activity on each channel regardless of the code used on the channel. If your radio's Interference Eliminator Code is set to -, the radio checks for activity only on channels using codes - and ignores channels using code .

## Advanced Scan

If the radio stops scanning on a channel you do not want to listen to, briefly press and release or to resume scanning for the next active channel.

## Removing Channels from the Scan List (Nuisance Delete Feature)

To remove a channel so the radio does not stop on it while scanning, press and hold or for at least 3 seconds, then release. This temporarily removes the channel from the scan list.

To restore the channel, turn the radio off and then back on.

Note: You cannot remove the channel your radio was set to when you started the scan (called your home channel).



## Alerts

### Channel Busy Indicator

When a channel is busy, the LED flashes twice per second.

### Setting and Transmitting Call Tones

Your radio can transmit different call tones to other radios in your group so you can alert them that you want to talk.

To set a call tone:

1. With the radio on, press 3 times. The current call tone setting flashes and displays.
2. Press or to change and hear the call tone.
3. Press or to set the new call tone.

To transmit your call tone to other radios set to the same channel and Interference Eliminator Code as your radio, press .

### Notes

- The T5000 model has 5 call tones. The T5500 and T5550 model has 10 call tones.
- Setting the call tone to disables the call tone feature.





### Transmitting a Talk Confirmation Tone

You can set your radio to transmit a unique tone when you finish transmitting. It's like saying Roger or Over to let others know you are finished talking.

- To turn talk confirmation on, press and hold while you turn the radio on. When you release after transmitting, your call tone transmits and displays.
- To turn talk confirmation off, turn your radio off and then back on while pressing and holding .

### QT Noise Filtering

The QT noise filtering feature helps ensure uninterrupted communication with other Motorola radios that have this feature. This feature filters out unwanted transmissions from other radios. It is useful in places where there is heavy radio traffic, such as at an amusement park or ski resort.

Note: QT noise filtering is not available while the radio is scanning.

To turn QT noise filtering on or off:

1. Press until displays.
2. Press or until displays to turn noise filtering on, or until displays to turn noise filtering off.
3. Press to confirm your selection.



To transmit to a radio that has QT noise filtering turned on:

1. Select the same channel and Interference Eliminator Code as the other radio.
2. Press to send a call tone. This allows your voice to pass through the QT noise filter on the receiving radio.
3. Press and speak normally.

Note: If you skip step 2, the beginning of your message may not be heard on the receiving radio.

For a 30-second period, starting after the last transmission, all transmissions received on the selected channel and code will pass through the QT noise filter.





## Accessories

There are many accessories (sold separately) available for your radio. For more information, refer to the brochure included with your radio, contact the place of purchase.

### Using Audio Accessories

1. Turn the radio off. Plug the accessory connector into the jack. See page 11 and 12 for the location of the accessory jack on your radio.
2. Turn the radio on. Lower the volume before placing the accessory on your head or in your ear.
3. Press or while rotating to adjust the volume to a comfortable level.
4. To transmit, press and speak into the accessory microphone, if any.
5. To receive, release .

### Voice Activation (VOX) (T5500 and T5550 models only)

Voice activation (VOX) allow you to talk handsfree when used with optional accessories connected to the radio. See the Motorola Talkabout accessory brochure for available VOX accessories.

1. Turn the radio off.
2. Insert the plug of the audio accessory firmly into the accessory jack (see page 12).
3. Turn the radio on. displays.
4. Lower the radio volume before placing the accessory on your head or in your ear.



5. To transmit, speak into accessory microphone. There is a short delay between the time you start talking and when the radio transmits.
6. To receive, stop talking.

To turn VOX off, press or remove the audio accessory.

### Setting the Sensitivity Level

Adjusting the radio's sensitivity level helps minimize the possibility of unintended noises triggering a transmission and helps the radio pick up soft voices.

1. Press until displays.
2. Press or to select the sensitivity level:

= High Sensitivity  
for quiet environments

= Medium Sensitivity  
for most environments

= Low Sensitivity  
for noisy environments

Note: When you connect a VOX accessory, the radio is automatically set to the last chosen sensitivity level.





## Patent Information

This product is manufactured under one or more of the following United States patents.

5896277 5894292 5864752 5699006 5742484 D408396 D399821 D387758 D389158  
5894592 5893027 5789098 5734975 5861850 D395882 D383745 D389827 D389139  
5929825 5926514 5953640 6071640 D413022 D416252 D416893 D433001

### Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.



## Copyright Information

Manufactured, distributed or sold by Giant International Ltd., official licensee for this product. Motorola, the Motorola logo trademarks and the Motorola trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. Please contact Giant International Ltd. at 800-638-5119 for questions/comments, warranty, support, or service related to this product. MOTOROLA and the Stylized M Logo are registered in the U.S. Patent & Trademark Office. All other product or service names are the property of their respective owners. © Motorola, Inc. 2004.





## Motorola Limited Warranty for Personal Communication Products, Accessories and Software Purchased in the United States or Canada

What Does this Warranty Cover? Subject to the exclusions contained below, Motorola, Inc. or its licensees warrants its consumer two-way radios that operate via Family Radio Service or General Mobile Radio Service ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-Roms or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products Covered	Length of Coverage	Exclusions
A. Products as defined above, unless otherwise provided for below.	A. One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.	Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.  Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Warranty

27



Products Covered	Length of Coverage	Exclusions
1. Consumer Two-Way Radio Accessories.	1. Ninety (90) days from the date of purchase by the first consumer purchaser of the product.	Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.  Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.  Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or

Warranty

28





Products Covered	Length of Coverage	Exclusions
2. Products and Accessories that are Repaired or Replaced.	2. The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.	<p>conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.</p> <p>Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.</p> <p>Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.</p> <p>Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals</p>

Warranty

29



Products Covered	Length of Coverage	Exclusions
		<p>or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.</p> <p>Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.</p>

Warranty

30

Who is covered? This warranty extends only to the first consumer purchaser, and is not transferable.

What will Motorola Do? Motorola or its licensees, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.





**How to Obtain Warranty Service or Other Information?**

To obtain service or information, please call:

USA Two-Way Radios 1-800-638-5119	Canada Two-Way radio 1-800-638-5119
--------------------------------------	--

For Accessories and Software, please call the telephone number designated above for the product with which they are used.

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There? ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO the duration of this Limited WARRANTY, otherwise the REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS Limited WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, and is provided in lieu of all other warranties, express or implied. In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, Accessory or Software, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, software or applications or other financial loss arising out of or in connection with the ability or

Warranty

31



inability to use the Products, Accessories or Software to the full extent these damages may be disclaimed by law.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Warranty

32



T5000 & T5500 user guide --- cover



T5000 & T5500 user guide --- back



- **22 Channels (8 GMRS, 7 GMSR/FRS, 7 FRS) with 38 Interference Eliminator Codes**  
GMRS channels feature increased power for longer range. 14 channels ensure backward compatibility with FRS two-way radios. Eliminator Codes minimize interference from other groups.
- **Scanning**  
Easily finds channel and code by searching all combinations
- **QT Noise Filter**  
Filters out unwanted transmissions in heavy radio traffic areas.
- **Audible Call Tones**  
5 call tones (Model T5000)  
10 call tones (Model T5500, T5550).
- **Talk Handsfree With Voice Activation (VOX)**  
when used with optional accessories.
- **Motorola Quality**  
Shock, drop, and temperature tested to meet Motorola's high quality standards.
- **Talk Confirmation Tones**  
Signals others you are finished talking.
- **Durable, Fixed Antenna**  
Maximizes talk range.
- **Weather-resistant**  
Helps protect radios against the elements.
- **1 Year Limited Warranty**  
For warranty details, please ask your retailer.
- **Low Battery Alert**  
Audible tone and visual display tell you when the battery is running down.
- **Illuminated Display**  
Easy to read your settings in dark places.
- **Quick Release Swivel Belt Clip Included**
- **User's Guide Included**

FRS/GMRS use approved in the US only; GMRS License Required.

**! WARNING CHOKING HAZARD  
SMALL PARTS**  
Not for children under 3 years.  
This product is not intended to be used  
as a toy or plaything.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. © Motorola, Inc. 2004.

